



## Update your machine's firmware using Brother iPrint&Scan

1. Launch Brother iPrint&Scan and select your Brother machine.
2. If your machine's firmware needs to be updated, the following screen appears.

Tap **Update**.

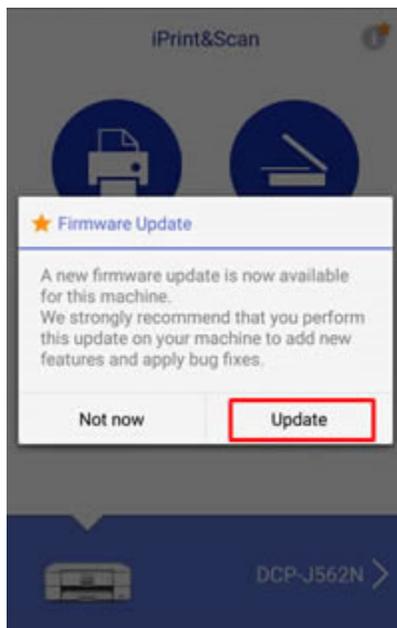

3. App **Update**.

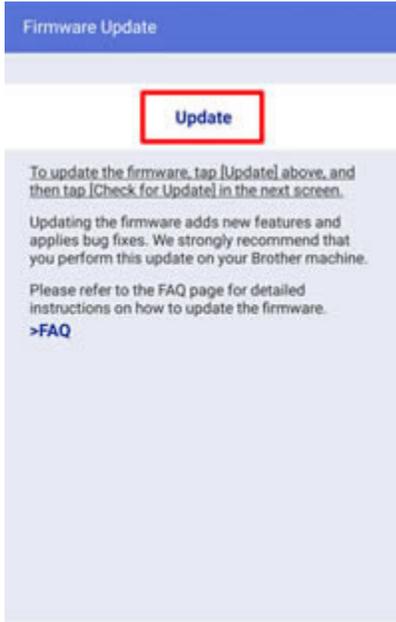

The web browser starts.

If the machine prompts you for a password, type it, and then click

**NOTE: Default Password: Where to find it (listed below)**

4.



5. Tap **Check for new firmware**.



6. Tap **Update**.

The firmware update starts. Do not turn the Brother machine off while updating.




7. When the **Successfully Completed** message appears, the firmware update is finished. Depending on your model, you may need further firmware updates. If additional Firmware Update screens appear, follow the on-screen instructions.

## NOTE: Default Password: Where to find it

1. The password is located on a label on the **rear** of the machine



2. Password will be the characters to the right of **pwd** and it will be exactly **8** characters and it is case sensitive, and may include letters, numbers, and symbols.

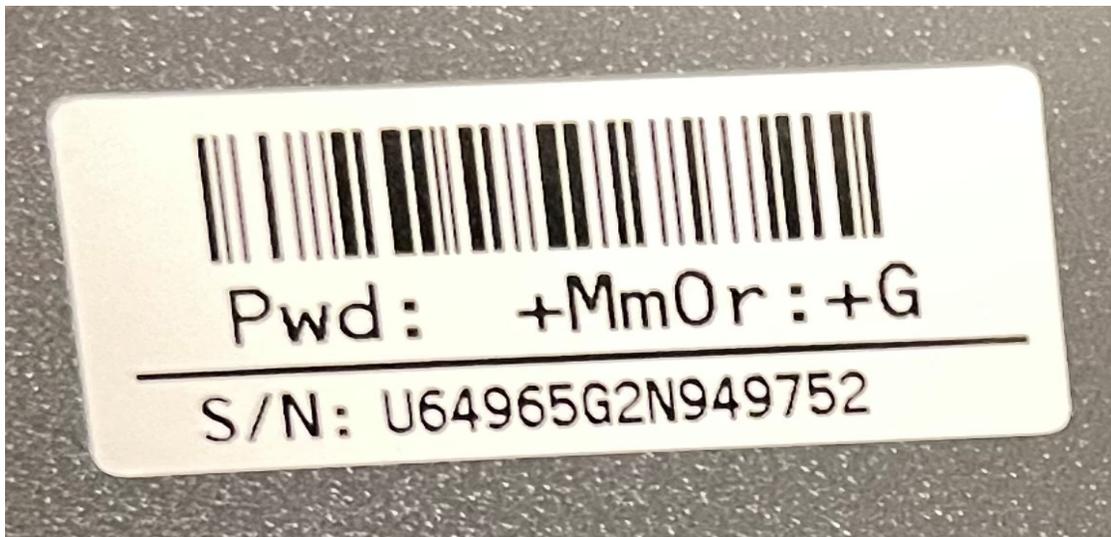

**Thank you**